


## Digital Central Supervisory Alarm Panel TO MACURCO GD-6

NOTE;

- 1) Remove GD-6 plugs before attaching the wires.
- 2) Ensure GD-6 wires are secure before plugging them into the GD-6.
- 3) Ensure power is off before doing any wiring to the DCSAP or GC-6
- 4) Verify all wiring before applying power.
- 5) GD-6 Alarm should be left at the default configuration "N.C."
- 6) DCSAP INPUT CHANNEL range must be set for 500. See page 6 of the DCSAP O&M Manual.

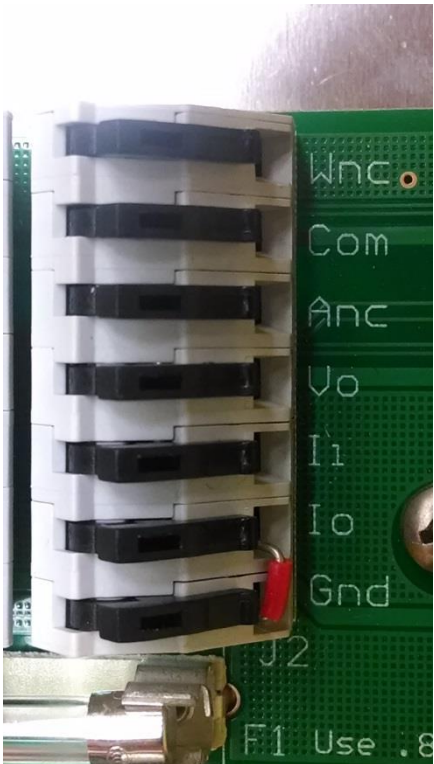

From DCSAP "Com" to GD-6 ALARM B

From DCSAP "Anc" to GD-6 ALARM A

From DCSAP "Vo" to GD-6 4-20mA +

From DCSAP "I1" to GD-6 4-20mA -

MAMAC 8 input wiring to DCSAP for MACURCO\_GD\_6.pdf  
For wiring to IP appliance.



From DCSAP 24VDC GND  
To GD-6 Power

From DCSAP +24VDC  
To GD-6 Power