

HMA121 - HMCA112-05 - HMCA112-L1

Hootronic: Alarm sounder and combined audio visual signalling device

Applications and users that have traditionally demanded conventional electromechanical hooters, sirens, buzzers and bells now have the next generation alternative featuring the latest in amplifier and digital to analogue conversion technology.

The E2S Hootronic series of products faithfully reproduce the sounds made by traditional electro-mechanical signalling devices but in a modern, reliable and cost effective way. With output levels of up to 121dB(A) at 1 metre the Hootronic also surpasses the performance and effectiveness of its traditional counterpart. Unlike the traditional electro-mechanical devices the Hootronic range is continuously rated, requires zero maintenance and signal quality and performance will not degrade with age.

The lightweight, durable housings are manufactured from impact and fire resistant UL94V0 ABS. The unit can also be supplied as combined unit with either a Xenon beacon in a choice of 6 lens colours or a multifunction L.E.D beacon in red, amber, green and blue.

Specifications:

Nominal output : 121dB(A) @ 1m +/-3dB

(HMCA112: 112dB(A) @ 1m)


- 3 stage audible alarm
- Volume control
- Voltages: 24vdc; 115vac;230vac
- IP66 dust protected & watertight
- Enclosure material: UL94V0 & 5VA rated FR ABS
- Colour available : Grey (RAL7035)
 Operating temperature : -25 to +55°C
- Storage temperature : -40 to +70°C
- Relative humidity: 90% at 20°CWeight HMA121: DC: 2.50Kg AC: 3.00Kg

HMCA112: DC: 3.00Kg AC: 3.50Kg

HMCA112-05: 5 Joule xenon beacon @ 1Hz (60FPM) HMCA112-L1: L.E.D Array of 32 high output L.E.D's




HMA121: Hootronic Alarm Horn

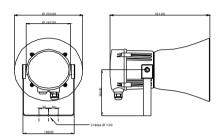



HMCA112: Hootronic Alarm Horn combined with either Xenon or L.E.D beacon.

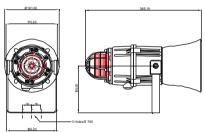

All dimensions are in millimetres.

NOTE:

- If applicable please review accompanying installation instructions for details regarding the xenon or L.E.D beacon.
- Cables for connecting the sounder to the beacon are supplied with the product.

Voltage range and current consumption for the HMA121 Hootronic Alarm Horn:

| Voltage: | 24 vdc | 115vac | 230vac | |
|----------|---------|---------|---------|--|
| | | 50/60Hz | 50/60Hz | |
| | | | | |
| Range: | +/-25% | +/-10% | +/-10% | |
| Current: | 375mA | 160mA | 75mA | |
| Current. | 3/31114 | TOUTIA | IJIIIA | |

Voltage range and current consumption for the HMCA112-05 Hootronic Alarm with 5J Xenon:

| | | 50/60Hz | 50/60Hz |
|----------|--------|---------|---------|
| | | | |
| Range: | +/-25% | +/-10% | +/-10% |
| | | | |
| Current: | 645mA | 270mA | 130mA |

Voltage: 24vdc 115vac 230vac

Voltage range and current consumption for the HMCA112-L1 Hootronic Alarm with L.E.D beacon:

| Voltage: | 24 vdc | 115vac | 230vac |
|----------|--------|---------|---------|
| | | 50/60Hz | 50/60Hz |
| | | | |
| Range: | +/-25% | +/-10% | +/-10% |
| | | | |
| Current: | 775mA | 300mA | 145mA |
| | | | |



Tel: 0044(0)2087438880 mail: <u>sales@e2s.com</u> Fax: 0044(0)2087404200 web: <u>www.e2s.com</u>

Mounting and cabling instructions:

The unit can be mounted using the stainless steel bracket. The bracket contains three 7mm holes on 30mm spacings. The barcket poistion is adjustable by loosening the bolts at the top of the bracket.

THe HMA121 and HMCA112 units contain two M20 cable entries. one of which is populated with an IP66 stopping plug.

The terminals in the HMA121 and HMCA112 products will accept from 0.5mm² to 4.0mm² stranded or single core cables.

DC units:

DC power supply connections should be made to the + and terminals.

To remotely switch the second and third stage sounds cable into the terminals marked 'S2' and 'S3' respectively. To activate the second and third stage sounds switch 'S2' or 'S3' to the negative supply whilst the unit is powered (see Fig.1). Stage 2 overides stage 1 and stage 3 overides stage 2.


The Hootronic sounder has the facility to replicate the 'tail off' traditionally associated with these tone when generated by electro-mechanical devices. The switching is achieved by cabling into the terminal marked STOP. The user can remotely activate and de-activate the sounder by switching the connection between the STOP wire and the negative supply line whilst the unit is powered. To achieve the 'tail off' sound at switch off the unit must remain powered.

AC units:

AC power supply connections should be made to the L. N and E.

To remotely switch the second and third stage sounds cable into the terminals marked 'C/-', 'S2' and 'S3' respectively. To activate the second and third stage sounds switch 'S2' or 'S3' to the 'C/-' cable whilst the unit is powered (see Fig.1). Stage 2 overides stage 1 and stage 3 overides stage 2.

The Hootronic sounder has the facility to replicate the 'tail off' traditionally associated with these tone when generated by electromechanical devices. The switching is achieved by cabling into the terminals marked STOP and 'C/-'. The user can remotely activate and de-activate the sounder by switching the connection between STOP and the 'C/-' cables whilst the unit is powered. To achieve the 'tail off' sound at switch off the unit must remain powered.

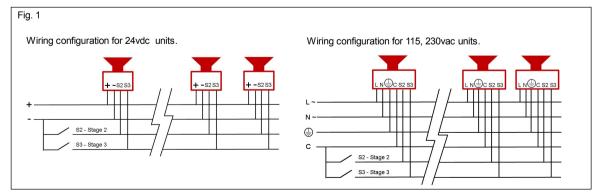

ISN5202-A No liability is accepted for any consequence of the use of this document. The technical specification of this unit is subject to change without notice due to our policy of continual product development. All dimensions are approximate. This unit is sold subject to our standard conditions of sale, a copy of which is available on

Tone Selection:

The Hootronic HMA121, HMCA112-05 and HMCA112-L1 have 5 user selectable 'traditional' sounds:

Tone 1: Industrial Hooter

Tone 2: High Frequency MechanicalSiren

Tone 3: Medium Frequency Mechanical Siren

Electro Mechanical Buzzer Tone 4:

Tone 5: Mechanical Bell

Each of these sounds has two additional, remotely selectable, alarm stages as shown in the table below (see Fig 2.). The first stage tone is selected by means of the pin headers marked 1,2,3 on the PCBA. Use the supplied jumper connectors to select the required tone by following the diagrams in the table below See 'Mounting and cabling instructions' for details of how to activate the second and third stages.

| Fig. 2 | | | | |
|----------------|-----------------------------------|----------------|----------------|--|
| Stage1 tone | Alarm Description | Stage2 (S2) | Stage3 (S3) | Head |
| Tone 1 | hdustrial Hooter | Tone 3 | Tone 5 | 3 • 2 • 1 • |
| Tone 2 | High Frequency Mechanical Siren | Tone 1 | Tone 5 | 3 ♥ 2 ♥ 1 ● |
| Tone 3 | Medium Frequency Mechanical Siren | Tone 1 | Tone 5 | 3 ● 2 ● 1 ● |
| Tone 4 | Electro Mechanical Buzzer | Tone 1 | Tone 5 | 3 • 2 • 1 • |
| Tone 5 | Mechanical Bell | Tone 1 | Tone 2 | 3 ● 2 ● 1 ● |



Disconnect from power source to prevent electrical shock before installing and servicing

Couper l'alimentation pour empêcher tout choc électrique avant d'effectuer des travaux d'installation et d'entreti en

[●]Vor der Installation und Wartung von der Spannungsquelle abnehmen, um elektrische Schläge zu vermeiden. Prima dell'installazione e della manutenzione s pegnere l'alimentazione elettrica per evitare scosse ele ttric he

Des conecte la alimentación para evitar descargas eléctricas antes de la instalación y mantenimiento

[●]Antes de instalar ou de fazer a manutenção desligue sempre da alimentação eléctrica para evitar choques

Strømmen skal afbrydes ved installering og eftersyn for at undgå elektrisk stød.

●Los koppelen van de elektrische v oeding om elektrische schok vóór installatie en onderhoud te v oorkomen.

•Før montering eller vedlikehold, må spenningen koples fra for å unngå strømstøt.

Bryt strömmen innan installation och underhåll för att förhindra elektriska stötar stötar.