

Multi-Point Gas Detection and Control System



DESCRIPTION

Wall mounted, microprocessor-based, multi-point, analog electronic control system for various gas, temperature and humidity detection, control and alarm.

APPLICATION

To control and alarm upon the presence of any toxic, combustible and refrigerant gases. Any combination of the AT-11/3300 series or other 4-20 mA transmitters can be connected to the control unit. The controller can interface via binary outputs, a 4-20 mA signal, and/or an optional BACnet or Modbus port with any compatible electronic analog control, DDC/PLC control or automation system.

FEATURES

- Continuous monitoring
- Sixteen (16) analog inputs, 4-20 mA
- Four (4) digital inputs
- Twenty (20) relay outputs:
 - Five-stage control
 - Fail-safe assignable
- Eight (8) analog outputs, 4-20 mA
 - Selectable for low, high or averaging
- One (1) 24 VDC supply output
- Built-in horn
- Accepts combination of toxic or combustible gases, refrigerants, temperature or humidity sensor inputs
- Liquid Crystal Display (LCD)
- Optional BACnet or Modbus upwards communication to BAS
- LED status indicators
- Keypad user interface
- Simple menu-driven programming
- RFI/EMI protected
- Modular technology
- Overload & short-circuit protected
- Resettable breaker
- NEMA 4X enclosure
- Easy maintenance



City of Los Angeles Approved



NRTL Tested & Certified
Conforms to STD
UL 2017

UL 2075 certified PolyGard Carbon Monoxide & Combustible Gas Transmitters are recommended for maximum system performance and reliability

Upwards Communication Options
BACnet, Modbus



SPECIFICATIONS

Electric

Power supply 120 VAC (90...230 VAC), 50/60 Hz
resettable breaker,
24 VAC on request

Power consumption 50 VA, max.
RF/EMI protected 4.0 W @ 3 ft. (1 m) radiated

Type of Control

General Five-stage (S1 to S5) control,
assignable up to twenty (20)
binary/relay output, i.e.
Low-med-high-fault/fail-horn*,
or low1-low2-med1-med2-high,
or any other combinations
(* = horn/audible alarm built-in
and factory pre-configured to
relay output "R20")

Analog inputs Sixteen (16) 4-20 mA
Analog reading Current and mean (average)
value

Stage level / setpoint Field adjustable over full range,
five (5) per analog input,
assignable to current or mean
(average) value

- hysteresis/
switching differential Selectable for each sensor point

Digital inputs

- application

Relay outputs (R1-R20)
w/ status LEDs

- each stage level (S1-S5)
- sensor fail-safe
Time delay switching

VDC output supply
Analog output

Audible alarm

Alarm acknowledgment

Four (4), each can be individually
assigned to any relay (R1...R20).
Remote audio/visual alarm reset
or override function

Twenty (20) SPDT, 8 A
24 VAC/VDC-250 VAC
contact resistance 100 mΩ, max.
Assignable to any relay
Assignable to any stage level
Selectable for make and break of
each sensor point (SP1 to SP16)
0-9,999 seconds

24 VDC, 0.5 A fused
Eight (8) independent 4-20 mA
signal, 500 Ω max. load,
selectable as low, high or
averaging of sensor inputs
85 db (10 ft), enabled or disabled,
selectable; assignable to stage
level S1, S2, S3, S4 or S5
Menu-driven and system reset
function for latched relays

SPECIFICATION

User Interface		Physical
Keypad type	Refer to section "User Interface & Controller"	Enclosure (panel)
Touch buttons	Six (6)	- material
Status LED's	Yellow: Fault (fail) Red: Alarm	Polycarbonate, impact resistance EN 50102/IK08, flammability rating UL 94-5V
Digital display	Liquid Crystal Display (LCD), two lines, 16 characters per line, 1 digit resolution, backlit	UL Type 1, UL 508 / UL 50 standards
- unit display	Menu selectable, per sensor; ppm, %LEL, Vol%, °F, %RH, %, ppk, °C	Light gray, smoked gray for cover NEMA 4X (IP65)
BACnet Interface, external*	Read status information via BACnet coupler and BACnet-Profile, BACnet-Services and BACnet BIBBs	Wall (surface) mounted
Input scaling		Dimensions (H x W x D)
0-250 ppm CO	Coupler option "T5-BAC-1-A"	16.9 x 12.0 x 5.7 in. (430 x 306 x 145 mm)
0-100%	Coupler option "T5-BAC-3-A"	10 holes for 1/2 in. conduit, covered
Communication Connector	TCP/IP 10/100 Mbits/sec	Terminal blocks,
Interface Description	Ethernet RJ45	Push-on connect and screw type for lead wire
Object types	BACnet-Profile	Wire connection
Modbus Interface, optional*	BACnet-Services "Who-is (execute)" "I-am (initiate)" "ReadProperty" "WriteProperty" Version B1.2, B2.2	Wire size
Module Communication	Read status Information via Modbus interface and Modbus function 16 and 03	- input - output
Interface Description Addresses	Integrated at Controller module 19200 baud 1 start-bit, 8 data-bits 1 stop-bit, no parity	Weight
- 1000 to 1098	Function 16	Approvals / Listings
- 2000 to 2048	Function 03	- unit rating
- 3000 to 3098	Current value internal, sensor 1-98	NRTL Perf Tested & Certified Conforms to STD ANSI/UL 2017 City of Los Angeles CE
- 0 to 6	Current value external, sensor 1-98	VDI 2053, C-No. 418791 EMC-Compliance 89/336/EWG
- 8 to 19	Average value internal, sensor 1-98	UL Listed, E75645
Environmental	Relay bits, relay 1 to 30	Two years material and workmanship
Permissible ambient	Analog outputs 1 to 12	
- working temperature	23°F to 104°F (-5°C to 40°C)	
- storage temperature	-4°F to 104°F (-20°C to 40°C)	
- humidity	15 to 95% RH, non-condensing	
- working pressure	Atmospheric ± 10%	

(*) BACnet Interface: NRTL Certification to UL STD 61010-1 – "Pending"

ORDERING INFORMATION**MGC2 - 16 - 2000 US**

Options	
00	No options
01	Key Lock w/2 keys
M0	Modbus Upwards Communication Port (integrated)

BACnet Options (MGC2-08, -16, -24)	
	<i>Standalone, External, BACnet Upwards Communication Coupler for AT Transmitters; NEMA 4X Encl.</i>
T5-BAC-1-A	0-250 ppm CO
T5-BAC-3-A	0-100%

Standard control system, ordering part number:

MGC2 - 16 - 2000 US,
configuration includes:


Digital, programmable controller with menu-driven key-pad user interface, LCD & LEDs, 120 VAC (90...250 VAC) 50/60 Hz, NEMA 4X enclosure

Inputs: (16) 4-20 mA
(4) Digital


Outputs: (20) Relays, SPDT, 8 A
(8) 4-20 mA
(1) 24 VDC, 0.5 A

USER INTERFACE & CONTROLLER

Keypad User Interface

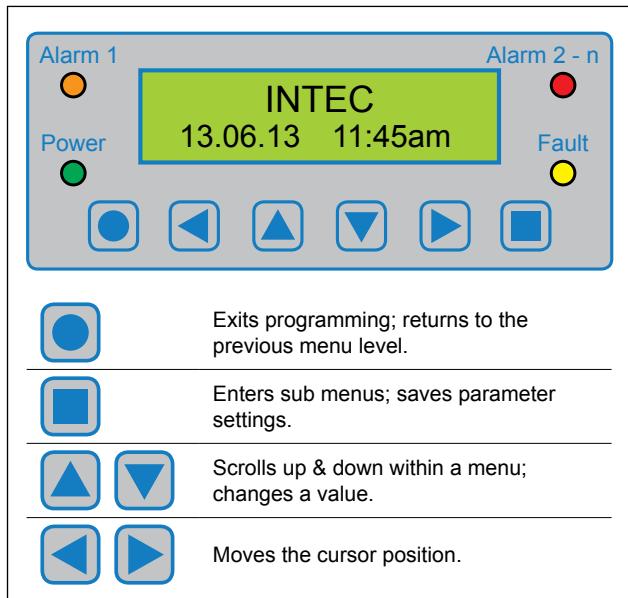

Main Page & Main Menu

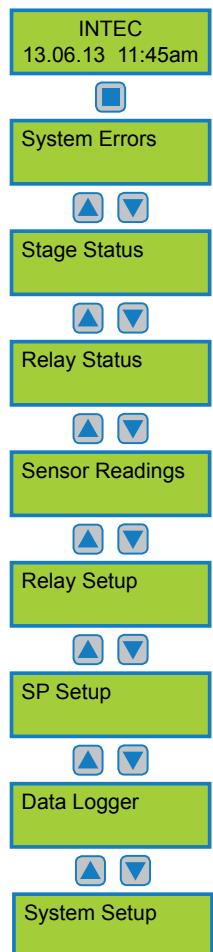

System Operation

All programming is made via the keypad user interface in combination with the display screen. Security is provided via two password levels. The lower level password (1234) allows to override or to reset system status functions. The upper level password (9001) allows all programming and override functions.

Main Page Display

After powered on, displays INTEC and Date/Time and changes to sensor reading display unless a system error occurs; then the error is displayed.

Main Menu

Displays headings of "System Errors", "Stage Status", "Relay Status", "Sensor Readings", "Relay Setup", "SP (Sensor Point) Setup", "Data Logger" and "System Setup".

Sub Menu "System Errors"

Displays errors, reset corrected errors, and historical error summary.

Sub Menu "Stage Status"

Displays status of each "SP" sensor point, stage level/setpoint exceeded.

Sub Menu "Relay Status"

Displays status and manual control of each output relay.

Sub Menu "Sensor Readings"

The current or average values are displayed for each "SP" sensor point with sensing type and engineering unit (ppm, %LEL, Vol%, °F, %RH, %, ppk, °C).

Sub Menu "Relay Setup"

Enter and/or change parameters of each relay.

- Assign de-energized or energized normal operation
- Select steady or flashing function
- Select latching or non-latching mode
- Select horn re-annunciation interval
- Select digital input usage, and assign to any output relay
- Set ON/OFF time delay

Sub Menu "SP Setup"

Enter and/or change parameters of each sensor point.

- Activate/deactivate sensor point
- Lock/unlock sensor point
- Alarm on rising or falling value
- Select sensor point type (gas, temperature, humidity)
- Select full scale measuring range
- Select sensor signal
- Select stage/setpoint 1 to 5
- Select hysteresis
- Set delay ON/OFF time
- Select current or average mode
- Assign sensor point fault to stage level activation
- Assign setpoint 1 to 5 to any output relay
- Assign to analog output

Sub Menu "Data Logger"


- Set data logger ON/OFF
- Set sensor data logging ON/OFF
- Set sensor data logging interval
- Set alarm ("stage status") logging ON/OFF
- Set system error logging ON/OFF

Sub Menu "System Setup"

Enter and/or change system parameters.

- Select service mode ON/OFF
- Set next maintenance date
- Select service phone number
- Select averaging function, time and overlay, of any SP
- Set date, time and time format
- Change customer password
- Select analog output function
- Set failure relay
- Select power ON time (alarm suppression)
- Select appropriate hardware configuration
- Assign relay multiplication

FIELD WIRING CONFIGURATION

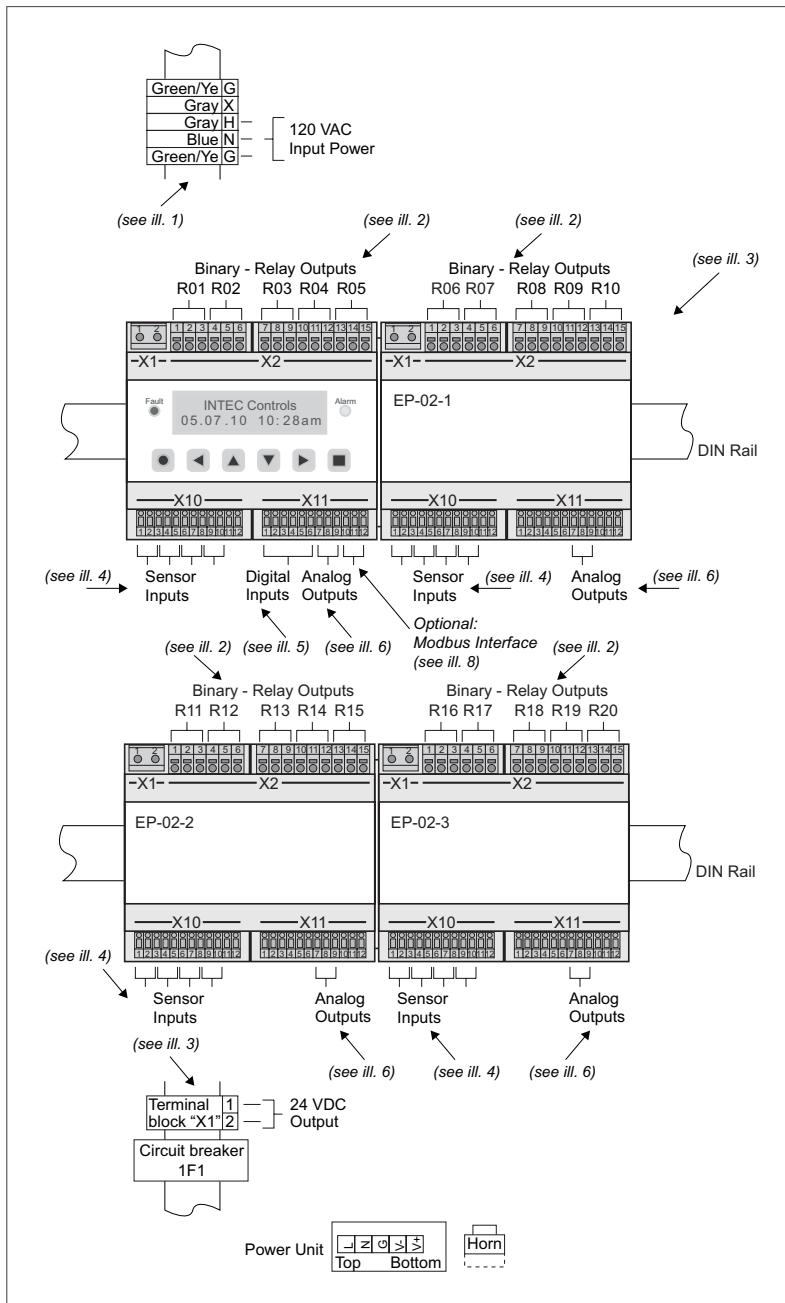

Recommended

- Twisted, shielded wire for analog inputs (Shield to be terminated and connected only at the sensor/transmitter location or controller)
- Grounded housing
- Do not ground at both ends!


Caution:

The non-metallic enclosure does not provide grounding between conduit connections. Use grounding bushings and jumper wires.

The enclosure is to be mounted using the mounting holes located in the base external to the equipment cavity, or the equivalent.


The conduit hubs must be connected to the conduit before connected to the enclosure.

When connecting conduit to the enclosure use only UL listed or UL recognized conduit hubs that have the same environmental type rating as the MGC2 enclosure.

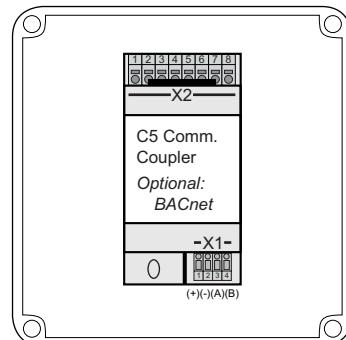

(see ill. 7)

120 VAC Input Power Supply

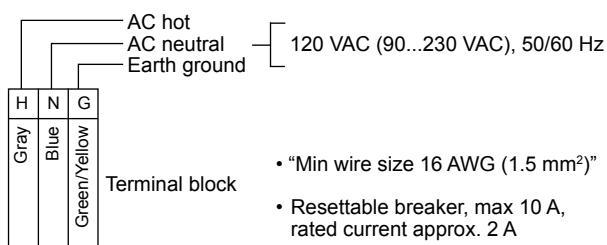


ill. 1


FIELD WIRING CONFIGURATION (cont...)

Binary - Relay Outputs "R01 to R15"


(Located at Controller module, EP-02-1 & EP-02-2 modules)

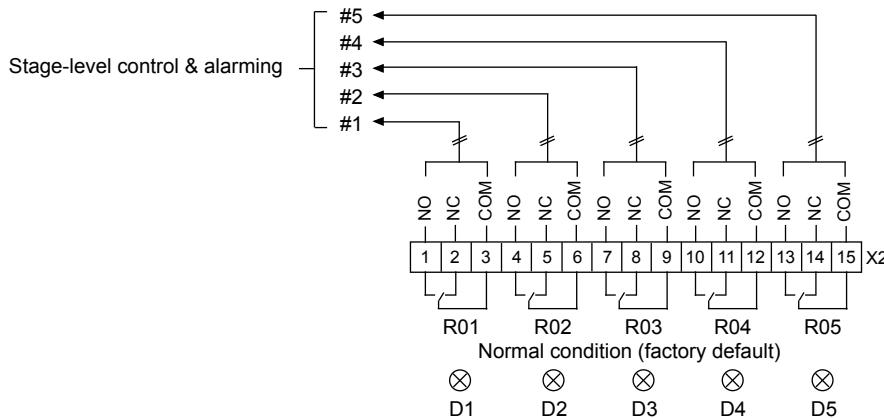

⊗ = Relay status LEDs D1 to D5 located below terminal connection of sensor inputs (X10)

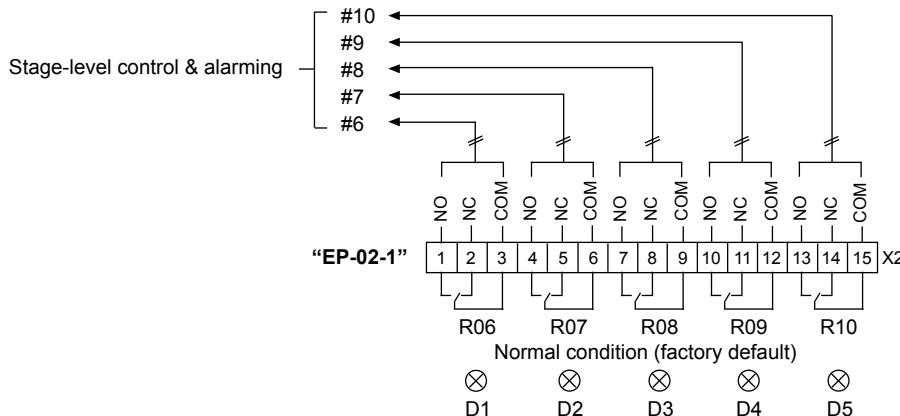


⊗ = Relay status LEDs D1 to D5 located below terminal connection of sensor inputs (X10)

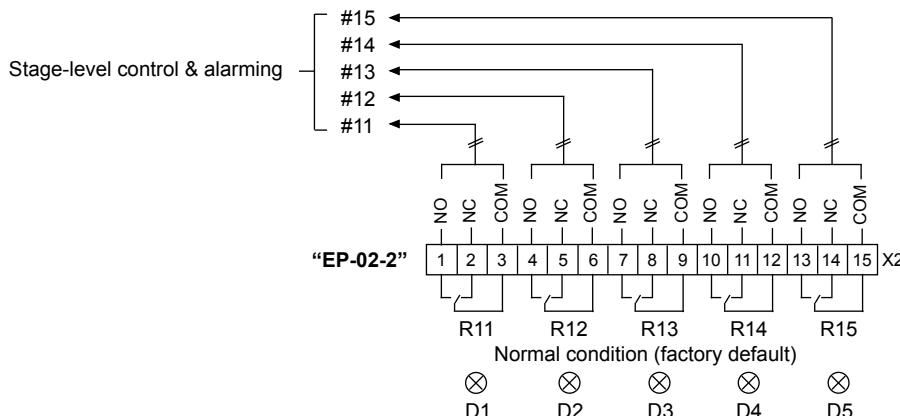


⊗ = Relay status LEDs D1 to D5 located below terminal connection of sensor inputs (X10)

ill. 2


FIELD WIRING CONFIGURATION (cont...)

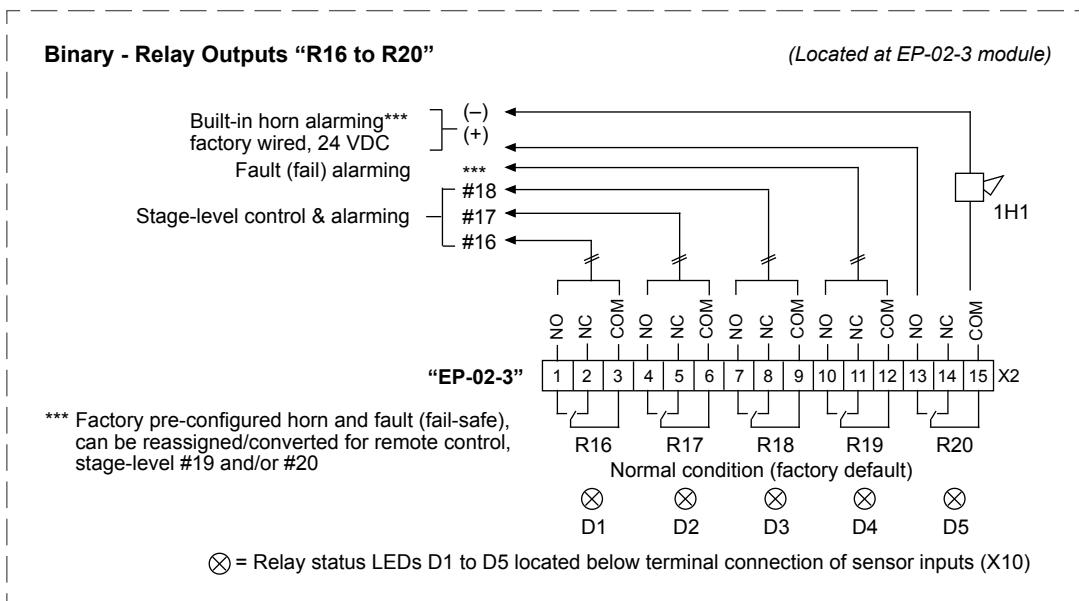

ill. 2 (cont...)

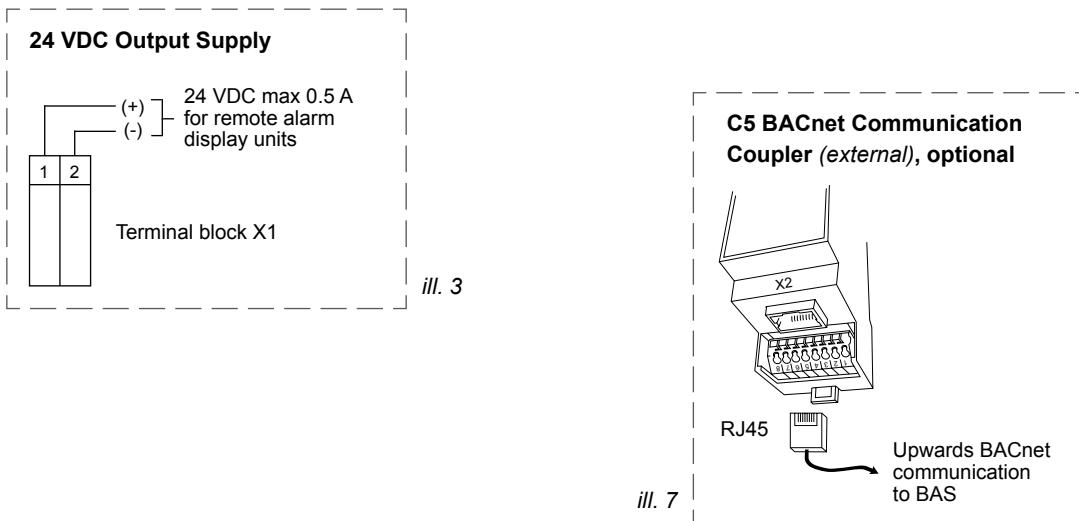






ill. 4, ill. 5 & ill. 6, see next page

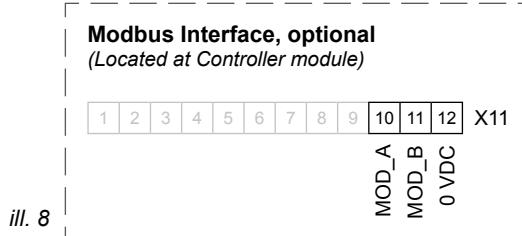

FIELD WIRING CONFIGURATION (cont...)

Sensor Inputs "SP01 to SP16"


(Located at Controller module, EP-02-1, EP-02-2 & EP-02-3 modules)

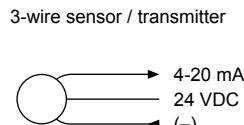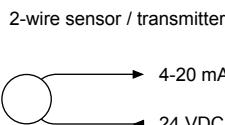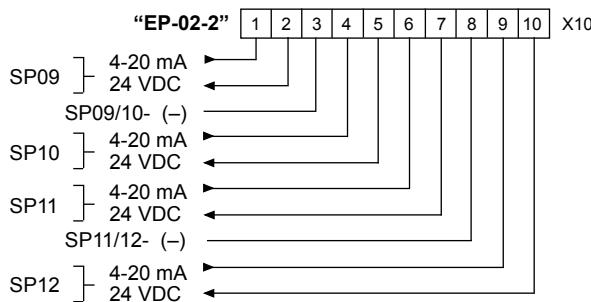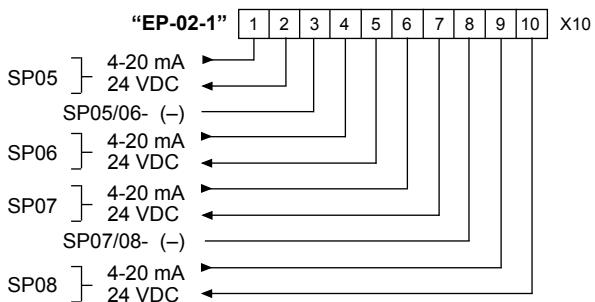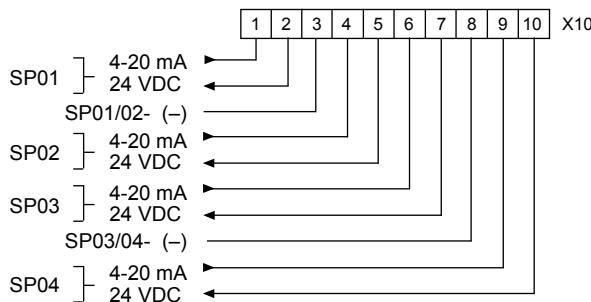

ill. 4

Digital Inputs "DI01 to DI04"

(Located at Controller module)







ill. 7 & ill. 8, see previous page

ill. 5

Analog Outputs "AO01 to AO08"

(Located at Controller module, EP-02-1, EP-02-2, EP-02-3 modules)



4-20 mA signal to remote control or BAS,
selectable low, high or averaging of (8) analog
(sensor) inputs, 500 Ω max. load

The current signal is sourced
by the MGC system

Authorized Distributor:
GasDetectorsUSA.com
Houston, TX USA
832-615-3588
sales@GasDetectorsUSA.com

ill. 6